

PRESSURE RELEASE VALVE

ONE-WAY PRESSURE RELEASE VALVE



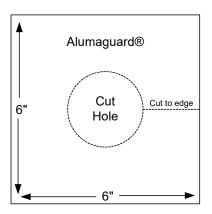

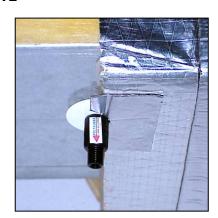

One of the paramount features of **Alumaguard**® is its aggressiveness and how well it adheres to foil substrates creating an incredible seal! In fact, it seals so well that IF you have substantial air leakage from a poorly installed duct, we will bubble and balloon and it is possible to pull the FSK paper off the substrate.

To relieve pressure related stress, we sell a miniature **air release valve** which can be installed in the bottom of the duct to relieve air pressure. Install as many as are required; if the system has been ballooned for a long period of time, the bubbles may not re-adhere.

If installing the air pressure relief valves as part of a new installation, it is recommended they be installed at a density of one every four (4) square feet.

Simply cut a hole the size of the screw portion of the valve (make sure the arrow is facing out – if the label is gone, blow in it, it will only blow one way) in the **Alumaguard**®, insert the valve so that the PVC disk is flush to the valve and the **Alumaguard**. Cut a 6" square piece of **Alumaguard**, cut a hole in it the size of the valve body, slit it to one edge, remove the release liner and apply it around the valve to seal the installation. DO NOT INSTALL valves on the top of the duct! They must be protected from rain entering them.



X:/Mktg./Lit/Mech/2019/Alumaguard Pressure Release Valve.doc R.5-22-20

P.O. Box 755 Ennis, TX 75120 PH: (214) 515-5000 FX: (972) 875-9425

This information is based on our best knowledge, but POLYGUARD cannot guarantee the results to be obtained.

